

DeltaTray Thames

Installation Guide With Centre or Offset Drain



DeltaTrayThames

Installation Guide With Centre or Offset Drain

The DeltaTray Thames shower tray formers have been developed to create elegant and luxurious wetrooms. The versatility of the components satisfies all possible bathroom layouts providing a totally waterproof solution. They are designed for installations that are to be finished with natural stone, ceramic or porcelain floor tiles.

Using DeltaTray Thames for your wetroom project provides versatility of installation. The easy to cut base allows the tray edges to be trimmed to suit site conditions providing complete flexibility, allowing the drain position to be altered avoiding obstruction from the floor joists.

The Thames trays are available in thicknesses of 22mm and 27mm depending on size of tray used. Overlaying the surrounding floor area with DeltaBoard will create a level access, tile ready, waterproof and thermally insulated wetroom floor. Thermal insulation will optimise the performance of any electrical underfloor heating system installed onto your wetroom floor.

It is very important that you fully read through these instructions to familiarise yourself with processes and requirements set out before commencing installation of your Delta Tray Thames.

Tray Depth Options

Fall to drain -11mm (22mm Tray)



*Illustration not to scale

Fall to drain -16mm (27mm Tray)

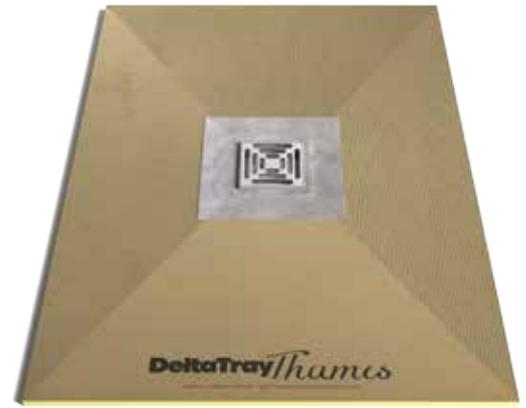


*Illustration not to scale

Fall to drain -19mm (30mm Tray)



*Illustration not to scale



Please note that the DeltaTray Thames is **NOT** designed for use with:-

Tiles that are less than 8mm thick

Tiles that are less than 20mm x 20mm

Vinyl floor coverings

Solvent based adhesive

Ready mixed adhesive paste

For use with mobility shower chairs and wheelchair access tiles must be no smaller than 150mm x 150mm



Clear the working area from loose debris and grease. Place DeltaTray onto floorboard/ chipboard to allow marking out of the tray perimeter onto the floor. When setting out the position of the tray it is important to remove the floorboard/chipboard past the edge of the tray and back to the centre of the next joist. Check that the position of the drain does not conflict with joists below the floorboard/ chipboard.



If the drain conflicts with a joist or other obstruction, the tray sides can be trimmed to alter the drain position. Refer to trimming your DeltaTray for details.



With the tray position marked out, the floorboard/chipboard can now be removed. Following the markings on the floor cut through the floorboard using an electric saw. Check the saw blade is set to the correct depth to avoid damage to the existing joists or any pipework/electrical cables which may be concealed below.

NOTE: Check the planned position of the drain body is free of obstruction.



STEP 4

To allow support of the drain fitting aid and the drain body, construct a platform to suit the waste position in the tray. Using screws and glue, securely fix 50mm x 25mm timber battens to the floor joists then fix a 25mm marine plywood supporting base onto the battens.


NOTE: 25mm plywood must be used throughout installation of the DeltaTray.



STEP 5

The drain fitting aid is 100mm deep (80mm deep if using shallow drain) and it is important when setting out the supporting platform to allow for the thickness of the fitting aid to finish flush with the top of the floor joists.

The drain fitting aid is designed to allow it to be cut to suit the position required.

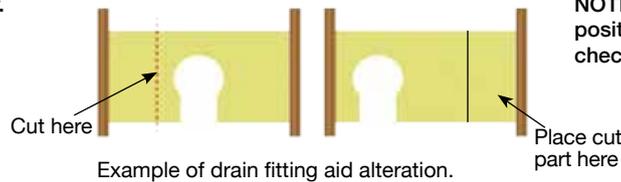

STEP 6

Once the platform is installed, place the drain fitting aid and drain body into position. Using 1½" ABS fittings, fix the waste pipe into the drain body using a suitable solvent weld.


It is important at this stage to check for any leaks, as you may not be able to return to this assembly at a later date.

NOTE: Before any glue is applied, the position of the drain fitting aid must be checked by placing the DeltaTray in place.



STEP 7

With the drain body and waste route now installed and tested, a structural platform to support the DeltaTray can be fitted. DeltaTray is not designed to span across joists, therefore it is essential that the entire base of the DeltaTray is supported by a structurally stable surface. This is achieved by securely fixing 50mm x 25mm timber battens set 25mm below the top of the joists. The battens should be fixed using glue and screws to the supporting joists.

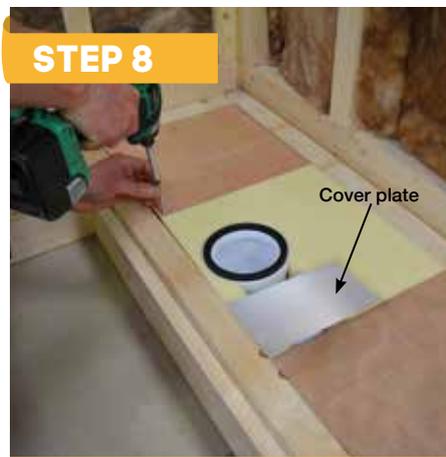

STEP 8

With the battens secured, a 25mm thick plywood support platform must be placed between the joists to support the entire base of the DeltaTray. The 25mm plywood should be screw fixed to the 50mm x 25mm timber battens and should finish flush with the top of the floor joists.

Place the stainless steel cover plate over the void in the drain fitting aid.



STEP 9

With the structural platform complete it is important to check the alignment of the drain body and the drain aperture in the DeltaTray. Make sure they are perfectly aligned and if necessary adjust accordingly. The DeltaTray should now fit onto the newly created platform but sit slightly proud of the remaining floor area. During preparation of the floor area, excess floorboard/chipboard may have been removed back to the next joist centre. This can be backfilled using marine plywood at the necessary thickness to suit.

Depending on the DeltaTray thickness, the height difference between tray and the surrounding floorboards can vary. This difference will be made level at a later stage by fixing DeltaBoard over the surrounding floor area.

STEP 10



With the installation of the supporting platform fully prepared and all checks complete, the DeltaTray can now be fixed into place. DeltaTray is permanently fixed in place using a good quality, cement based rapid setting flexible tile adhesive. Apply the adhesive with a thick bed notched trowel to the area where the DeltaTray is to be placed.

Make sure adhesive is applied over the stainless steel cover plate. When applying the adhesive around the drain it is important to leave a 10mm gap between the adhesive and the main rubber seal of the drain body.

NOTE: Should any adhesive come into contact with the rubber seal of the drain body, remove seal immediately and clean thoroughly with water before continuing.

STEP 11



With care place the DeltaTray into the adhesive. Make sure the rubber seal of the drain remains firmly seated on the drain body. Apply moderate pressure to the entire surface of the tray and around the drain aperture, making sure there are no hollow spots beneath the tray.


Using a spirit level make sure the DeltaTray is perfectly flat and level around perimeter. If the DeltaTray is set out of level, water will not flow to the drain correctly.

STEP 12



Using the securing tool supplied with the drain, screw the threaded waste collar into the drain body before the adhesive hardens. Care must be taken to fully tighten the assembly to ensure a watertight seal is achieved. The securing tool should be left within the drain body at this stage to protect against debris falling into the drain during tiling and grouting.

STEP 13

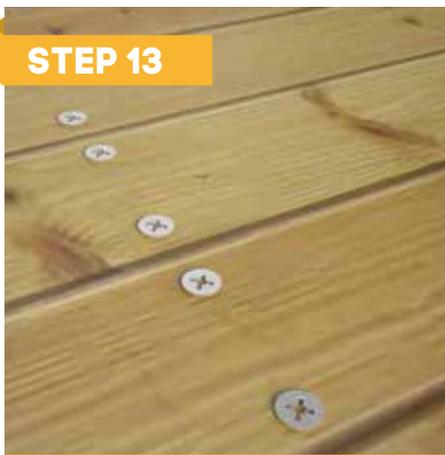

With the DeltaTray fixed into the adhesive, the surrounding floor area can now be overlaid with DeltaBoard. It is very important that the existing floorboard/chipboard must be securely fastened to the joists using suitable screws. If previously fixed with nails, additional screws should still be used.

DeltaBoard is available in a wide range of thicknesses, however 6, 10 or 12.5mm DeltaBoard is usually sufficient to level the surrounding floor to the tray. DeltaBoard can be dry fixed directly to wooden floors using 35mm diameter PCS washers and if preferred, using cement based rapid setting flexible tile adhesive.

STEP 14



If the DeltaBoard is to be installed using a dry fix method, PCS washers should be positioned at approx. 200mm centres. It is important to use the correct length of screw to avoid penetration of the floorboard/chipboard when fixing the DeltaBoard in place.

The boards should be positioned in a brick bond fashion to stagger joints and checked to ensure there are no hollow spots beneath the boards. Hollow spots can be corrected by adding additional PCS washers and screws. We recommend levelling any unevenness of the surface using a cement based, flexible self-levelling compound prior to tiling.

STEP 15



If using a cement based adhesive to fix the DeltaBoard, the existing floor surface must be primed with a suitable floor primer (refer to adhesive packaging for instruction.) Apply a solid bed of adhesive using a thick bed notched trowel and firm down the DeltaBoard into the adhesive bed.

The boards should be laid in a brick bond fashion to stagger joints and checked to ensure all boards are level.

NOTE: It is important to apply joint bridging mesh or waterproofing tape to all joints and abutments prior to tiling. Ready mixed or solvent based tile adhesive **MUST NOT** be used.

Waterproofing & Joint Bridging


DeltaTray and DeltaBoard are waterproof elements manufactured ready to receive the application of tiles and do not require additional surface preparation. However it is essential that all joint and abutments in areas subject to moisture and water ingress must be bridged with a suitable waterproofing system prior tiling.



STEP 1

We highly recommend that all walls in the shower area are lined with DeltaBoards, creating a completely insulated, waterproof solution ready for the application of tiles.

Apply a 5mm bead of DeltaSeal where the DeltaTray meets the walls, and also at internal wall to wall joints within the shower zone. If there are any joints or gaps greater than 5mm wide we recommend filling the gaps with a cement based tile adhesive before applying DeltaSeal.

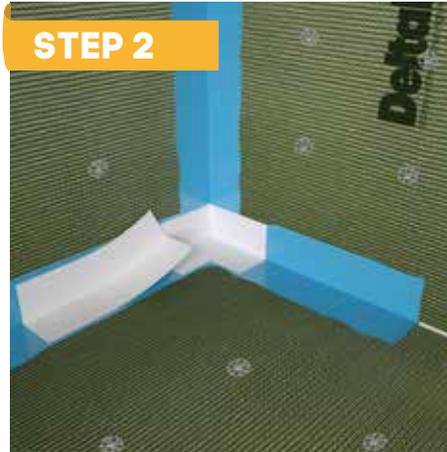

STEP 2


Using a suitable brush or roller, apply a thin coat of PCS Waterproofing Paste no thicker than 1/2mm over all floor and wall joints to be sealed. The special pre mixed paste is designed to be applied sparingly so avoid applying this paste in heavy layers.

The paste should be applied approximately 25mm wider than the Fleece Tape. Bed the fleece tape into the wet paste, starting with the pre-fabricated corner tape first, making sure that no air pockets remain under the tape.



STEP 3

For all remaining joints, cut the tape roll to the required length allowing the tape to overlap any previously fitted tape by a minimum of 50mm.

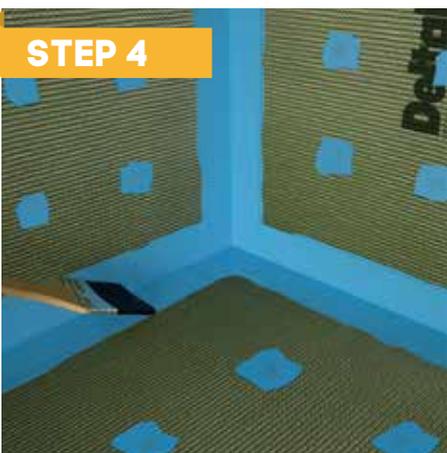

STEP 4

Make sure that all tape is bedded into the wet paste. When the first coat of paste has dried, a second and final coat of paste must be applied over the taped joints.

Delta Waterproofing Kit Contents



Internal Corners x2

Pipe Collar x2

DeltaSeal

Fleece Tape

Waterproofing Paste

How To Guide Trimming Your **DeltaTray** Thames



Your **DeltaTray** can be trimmed enabling the tray to be altered slightly to suit installation tolerances and also to overcome issues that may arise if the drain position becomes obstructed by joists under the floor. Trimming the tray will reduce the thickness of the tray on the sides that are to be trimmed. It is very important that after trimming, the cut sides of the tray are not reduced by more than 2mm of the original tray thickness.

The maximum length that the tray sides can be trimmed varies greatly and is dependent on factors such as tray thickness, tray size and drain position. Using the chart and following the example set out below you will be able to calculate the maximum cut length that can be trimmed off each side of your **DeltaTray**.

Identify the tray thickness, measure the side to be trimmed from the tray edge to the edge of the grate housing frame, multiply this measurement by the corresponding figure in the chart below. This calculated figure is the maximum length that can be trimmed from the tray.

Tray Thickness	Multiply Your Measured Distance By
22mm	x 0.18
27mm	x 0.125
30mm	x 0.10


Example 1

- Side 1 can be trimmed up to 122mm ($678 \times 0.18 = 122\text{mm}$)
- Side 2 can be trimmed up to 68mm ($378 \times 0.18 = 68\text{mm}$)
- Side 3 can be trimmed up to 68mm ($378 \times 0.18 = 68\text{mm}$)
- Side 4 can be trimmed up to 68mm ($378 \times 0.18 = 68\text{mm}$)


Example 2

- Side 1 can be trimmed up to 134mm ($1077 \times 0.125 = 134\text{mm}$)
- Side 2 can be trimmed up to 47mm ($378 \times 0.125 = 47\text{mm}$)
- Side 3 can be trimmed up to 47mm ($378 \times 0.125 = 47\text{mm}$)
- Side 4 can be trimmed up to 47mm ($378 \times 0.125 = 47\text{mm}$)

Shower Tray 1200mm x 900mm x 22mm

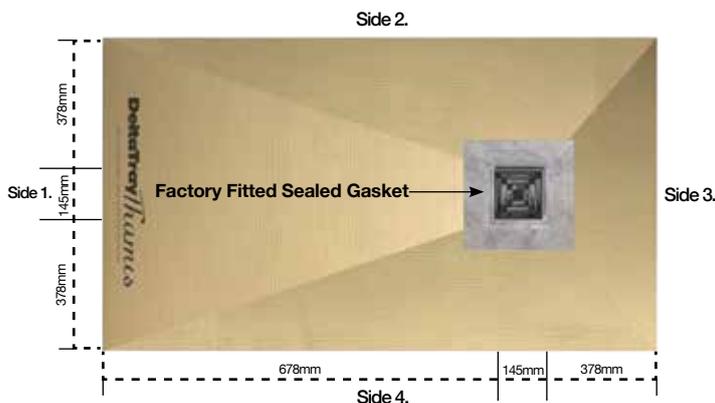

Shower Tray 1600mm x 900mm x 27mm

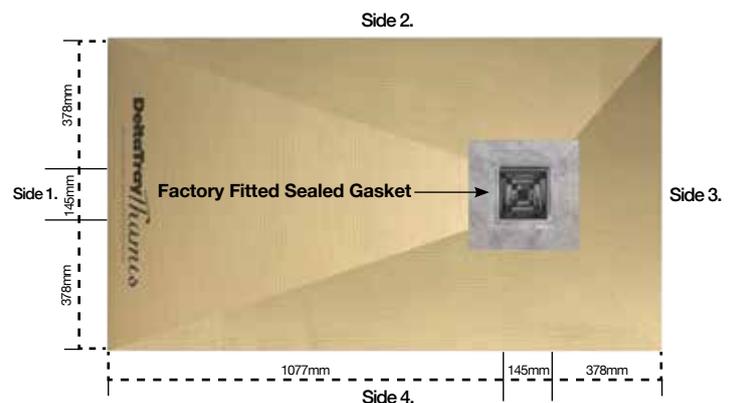

Setting Tiles To The Fitted Frame

DeltaTray Thames shower tray formers have been designed with a height adjustable grate housing frame that provides great flexibility for the installer when applying tiles and installing electric under tile heating.


The adjustable grate housing frame can be easily modified to suit tiles as thin as 8mm and up to 15mm thick. The frame can also be adjusted to accommodate electric under tile heating systems.



J0248

Tile-Into Square Grate

Upgrade the shower grate to the Tile-Into Grate, giving your wetroom a flawless clean tiled finish.

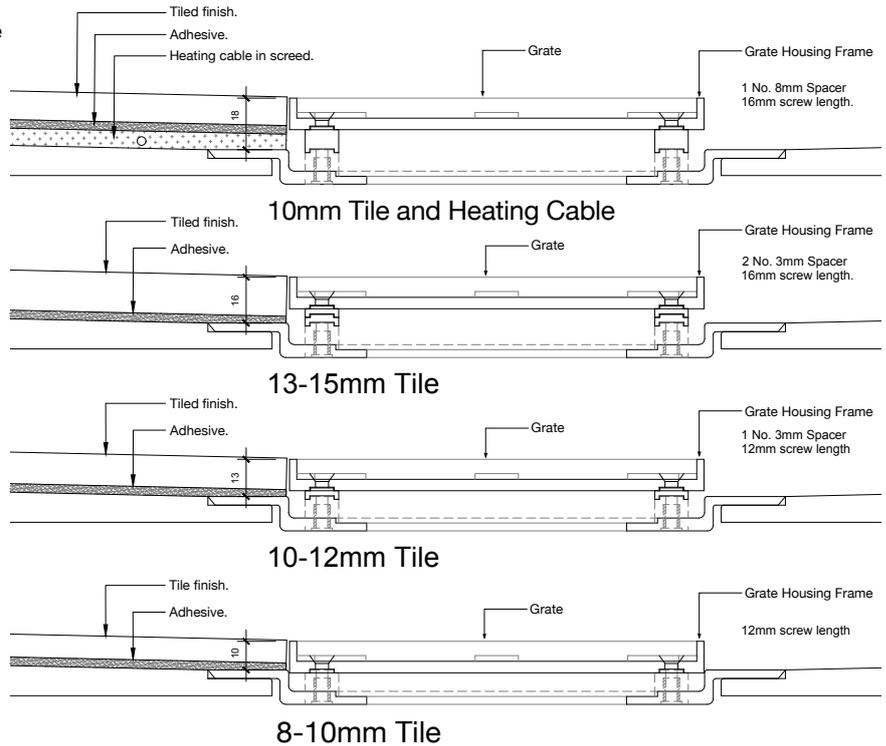

DeltaGrates

(Available As An Upgrade)

The DeltaGrate Range consists of eight, elegantly styled, brushed stainless steel grates.

DeltaTray drain kits include a standard stainless steel pressed grate to fit into the grate housing frame of your DeltaTray. The pressed grate provides an economical solution however upgrading the standard pressed grate to a DeltaGrate significantly improves the aesthetics of your newly created wetroom.

Tiling Notes : Under Tile Heating

DeltaTrays and **DeltaBoards** are perfectly suitable for use with *electric under tile heating systems. We highly recommend the installation of electric heating systems into your newly created wetroom floor including installing the heating element directly onto the DeltaTray and into the "Shower Zone" adding that extra special touch of comfort. Heated floors will also speed up the drying of the floor after showering. *Only use electric heating systems that are rated IPX7 in wetroom environments.


Fix tiles using a good quality, cement based, rapid setting, flexible tile adhesive. If using large format tiles, we recommend that you start by laying the tiles working from the corners of the fitted frame to the external corners of the tray carefully cutting the tiles to match the inbuilt falls in the Delta Tray.

Consideration must be given to the following when choosing tiles: For wheelchair access, tiles with a surface area no smaller than 150mm x 150mm should be used, for bare foot traffic, tiles should be no smaller than 20mm x 20mm mosaics. Complete the tiling of the floors and walls and grout the joints. Grouting should be carried out using a suitable waterproof cement or Epoxy grout.

Note: Ready Mixed or Solvent based adhesives must NOT be used. Take care when installing shower screens and shower hardware which will be required to complete your wetroom area.



Rev:04

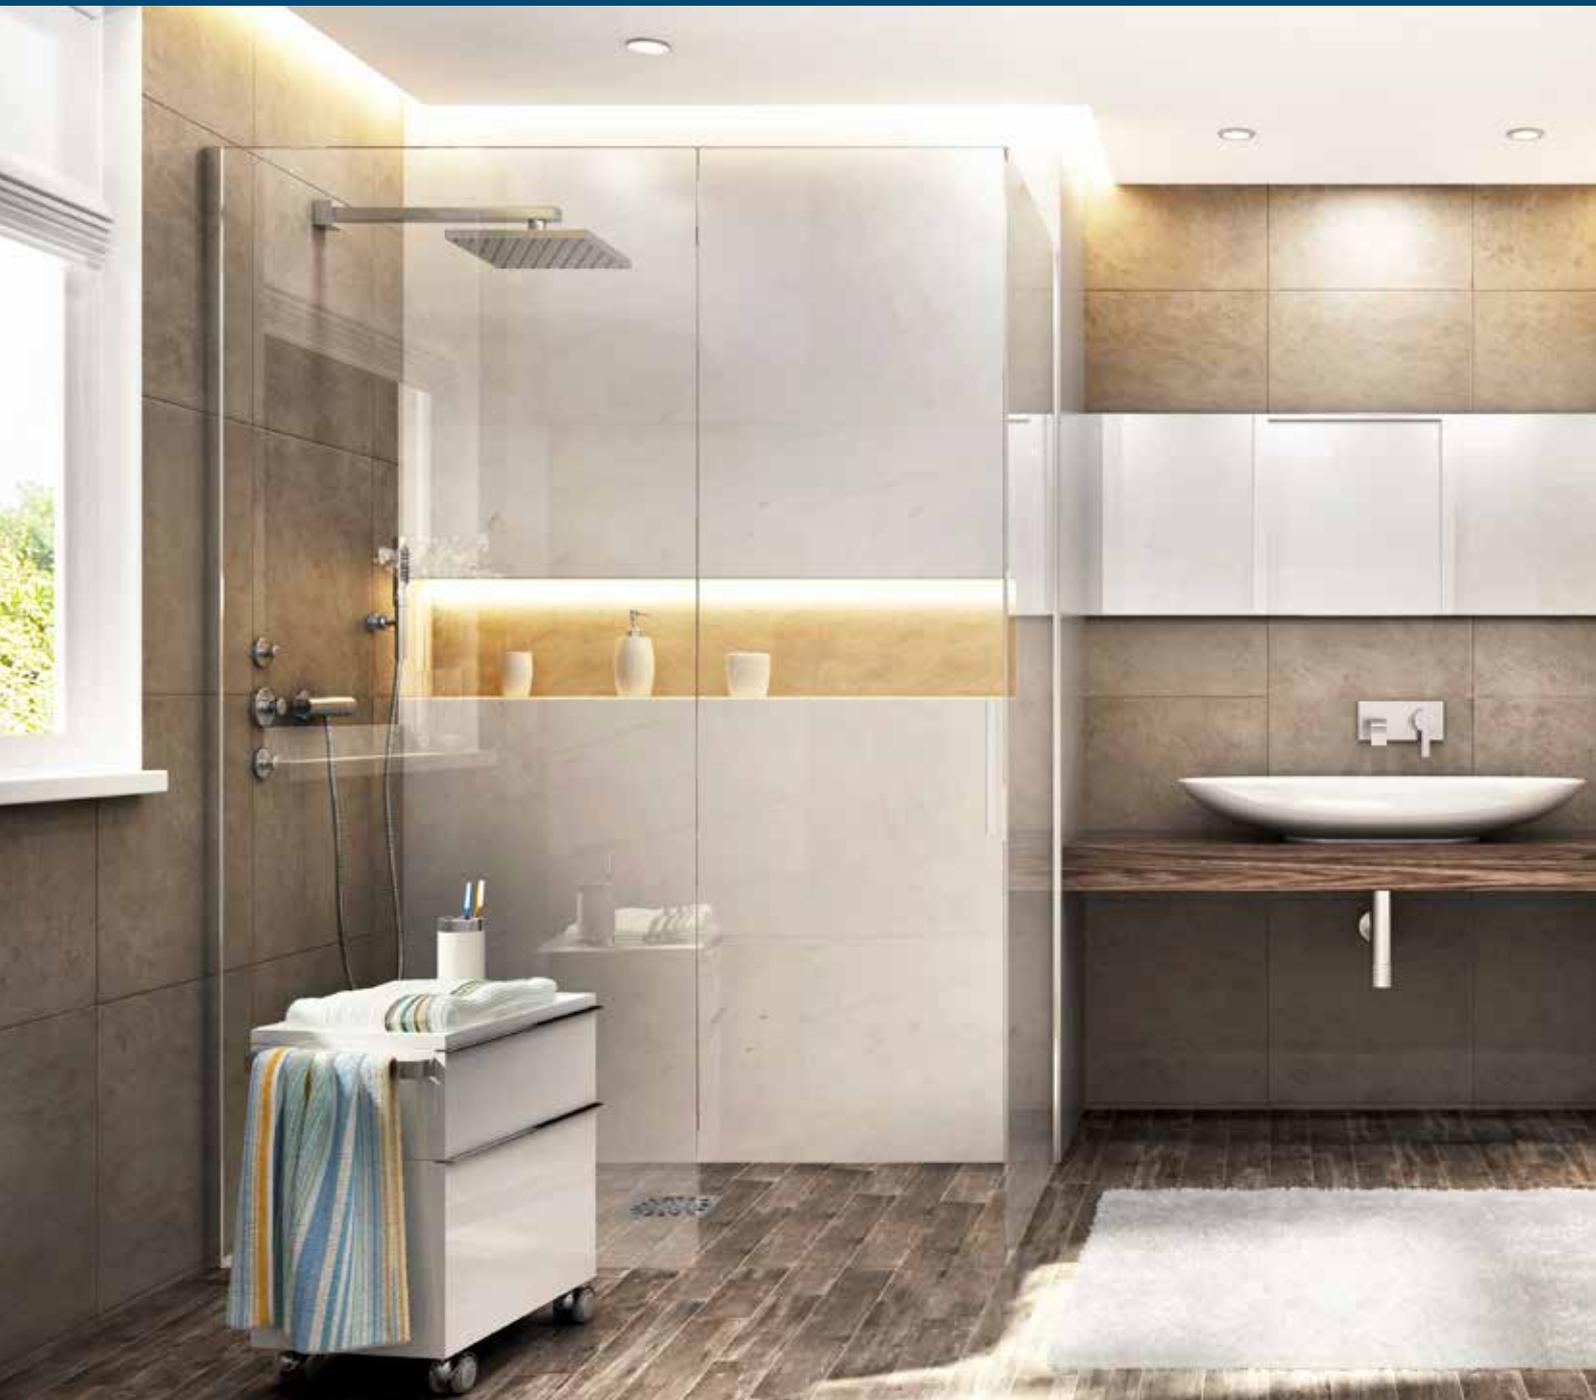

Polyfab Coatings & Systems Ltd.
Hemfield Court, Makerfield Way, Ince,
Wigan, WN2 2PR

01942 820131

sales@pcsboard.com

www.pcsboard.com